















# PARTS & ASSEMBLY SHEET

Fixture Name: **Torbellino 8106-363/15L CDB**

This fixture assembled PO: \_\_\_\_\_ Date: \_\_\_\_\_

**Notice:** Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

<b>PARTS LIST</b>		Company Name: _____ Co. Account #: _____ to be filled out by retailer	
Canopy 1ea 153mm * 32mm 	Screw collar loop 1ea 25mm * 45mm 	Small screws 2ea 8/32T * 1-1/4"L 	
Chain Hvy 1ea 12ft 	Threaded ring 1ea 30mm * 4mm 	Wire lock 1ea 8mm * 16hmm 	
Chain connector 2ea 23.8 * 59mm 	Nipple 1ea 12mm * 55mm 	Mounting strap 1ea 100mm * 20mm 	
Wire connectors 3ea Orange 	1/2" Nipple / Threaded rod 1ea 12mm * 250mm 		
Fender washer 2ea 8/32T * 8L 	Hex Nut 7ea 19mm * 4mm 	Mounting screws 2ea 8/32T * 1-1/4"L 	
Part Needed _____		Quantity _____	
Part Needed _____		Quantity _____	
Reason why _____	( missing, scratched, broken glass, bent, bad finish)		
Comments _____			


## FIXTURE ASSEMBLY INSTRUCTIONS

**Read and review installation instruction sheet before assembling the fixture.**

1. Feed the fixture wires through the Top loop (J) and pull the wires until taut.
2. Then screw the Top Loop (J) to the top of Frame (K) until tight.

**NOTE: INSTALL THE GLASS ASSEMBLY AFTER THE FIXTURE IS HUNG.**

8106-363/ 15L CDB

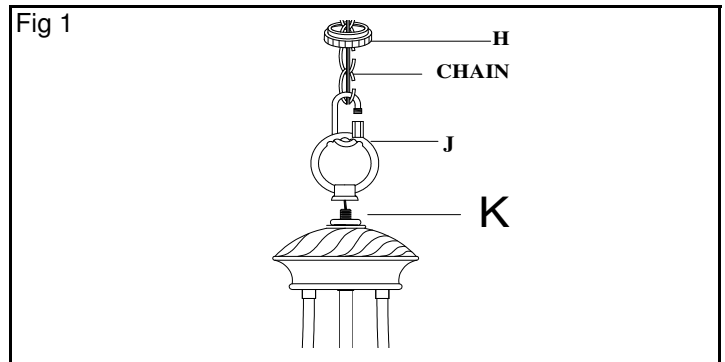

**For Customer Service, contact the place of purchase to arrange for replacement parts.**

# PARTS & ASSEMBLY SHEET

Fixture Name:

Torbellino 8106-363/15L CDB

3. Unscrew the Deco screws (M) from the Frame and save.
  4. Several of the arms are already attached to the Frame. Gently spread the remaining arms until evenly spaced.
  5. Align the hole in lower side of Frame arm with hole Frame. Secure in place with the Deco screw (M).
  6. Repeat with remaining arms both upper and lower, secure with the Deco screws (L, M).
- \* NOTE: The Finial can be scratched or broken if the full weight of the fixture is placed on it. To avoid damage attach Finial after hanging the fixture.
7. Attach Finial (O) to the base of fixture Frame by threading the Finial (O) onto the threaded rod (N) until tight.

8106-363 CDB

8106-15L CDB

Fig 2


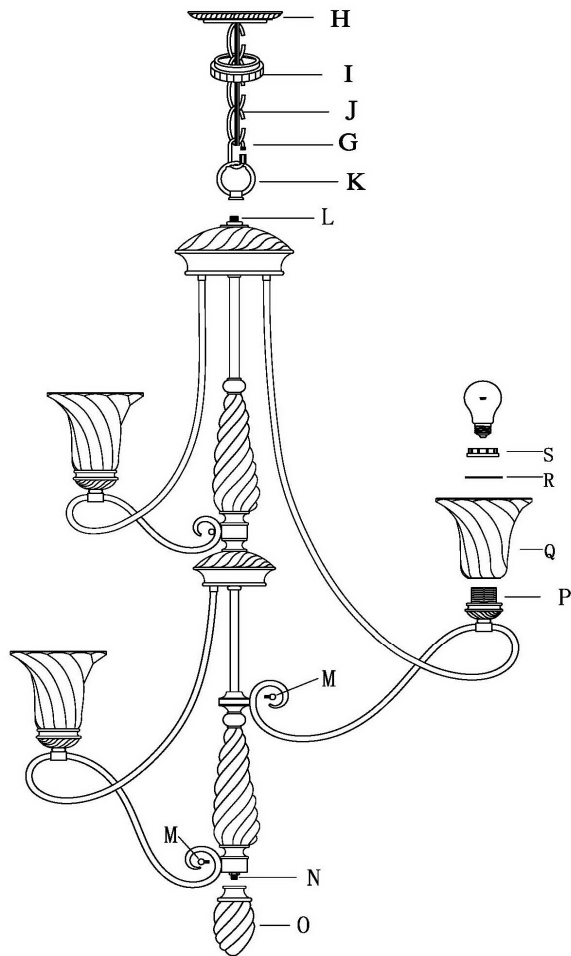


Fig 2

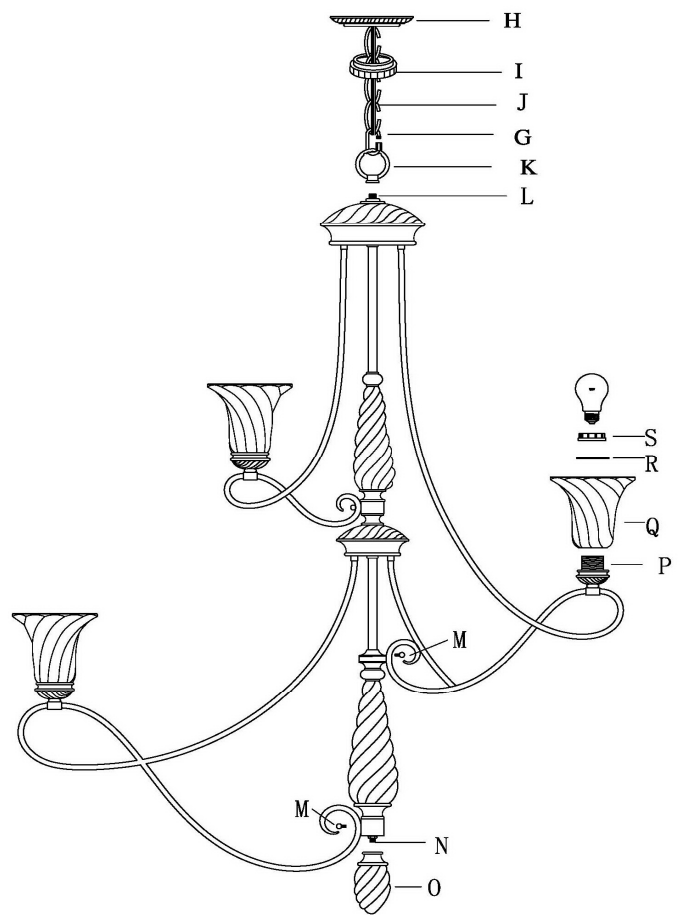

For Customer Service, contact the place of purchase to arrange for replacement parts.


# PARTS & ASSEMBLY SHEET

Fixture Name:

Torbellino 8106-363/15L CDB

8. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (C2) then remove the excess Chain (C2) and discard it.
  9. Use one chain connector(E2) to attach one end of the chain to the Top loop (D2) and close the chain connector.
  10. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
  11. Slip Canopy loop collar (B2) over the chain, then do the same with the canopy (F2).
  12. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A2) and close the chain connector.
  13. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- \* You may now install the fixture.

Fig 3

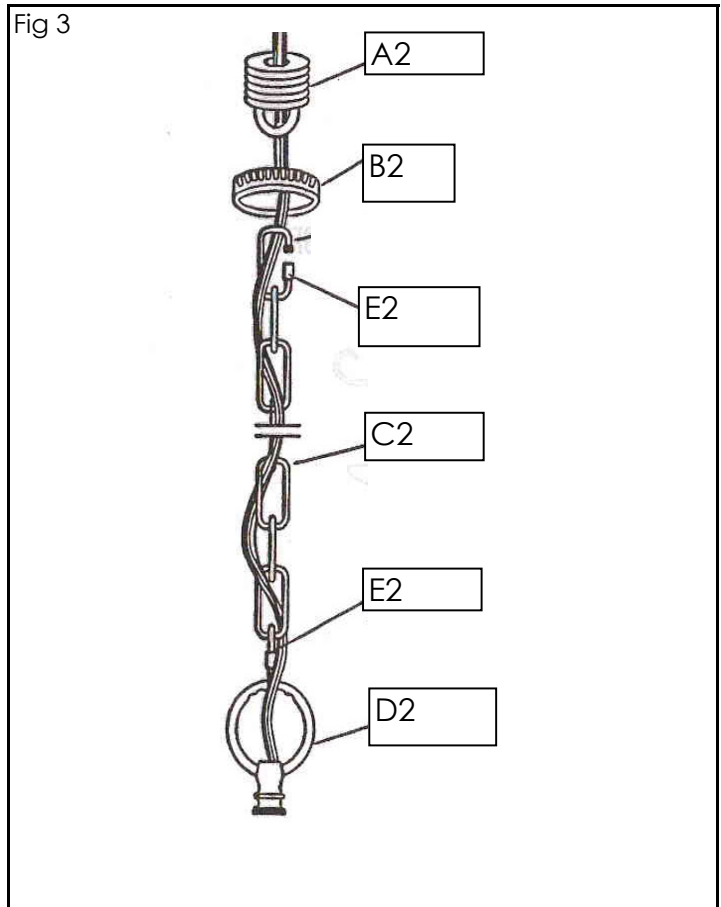


Note: Complete these remaining steps after the fixture is hung.

14. Place the Glass Shade (Q) over the Threaded Socket (P), place the Socket washer (R) over the threaded socket (P) then secure the Glass Shade (Q) by threading by the Socket Ring (S) until tight.
15. Install the light bulbs in accordance with the fixture's specifications.

(DO NOT EXCEED THE MAXIMUM WATTAGE RATING)

Fig 4

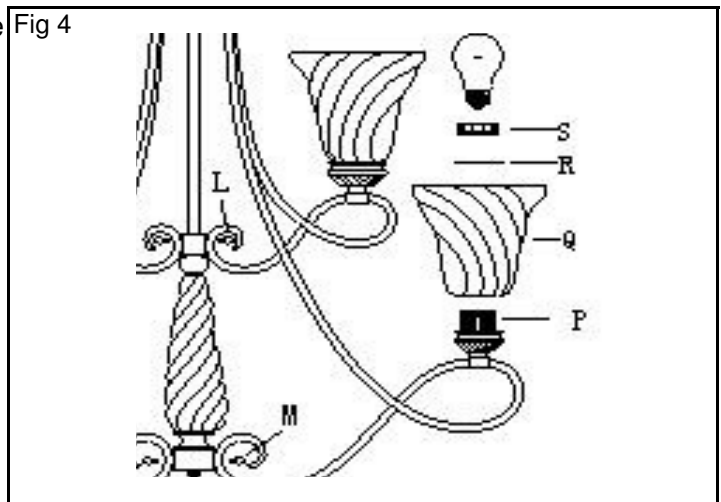

**For Customer Service, contact the place of purchase to arrange for replacement parts.**

## WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

**IMPORTANT! FOR A SAFE AND SECURE INSTALLATION THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORT THAT ARE INDEPENDENT OF THE OUTLET BOX.**

### HANGING THE FIXTURE (Fig.1)

- Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
- Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
- Mount the long Nipple to a beam or structural member with the Fender washers, toothlock washers and Hex nuts provided. The other end should protrude through the center of the outlet box as shown.
- Place Hex nut (D) and Lock washer (E) over the end of Nipple (A). Thread the Hickey (B) onto the Nipple (A).
- Place Hex nuts (D) and Lock washer (E) over end of short Nipple (C), thread Nipple(C) into Canopy Loop (F) until snug.
- Thread other end of the Nipple (C) with Canopy Loop attached into Hickey (B).
- Unscrew the Canopy loop collar (I) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. \*the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy lock collar. When the adjustments have been completed secure the three Hex nuts (D) and lock screws on Hickey (B).
- Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
- Thread the fixture wires, ground wire and safety cable of the assembled fixture through the canopy loop and nipple, exiting through the side of Hickey/coupler.
- Thread the safety cable through the lock and coil around the hickey twice, through the lock again, tighten it with screw into lock. Run cable through the top of the outlet box and secure to structural member.

### CONNECTING THE WIRES (Fig 2)

- Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
- Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire using the wire connectors. NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
- Tuck these wire connections neatly into the Junction Box.
- Raise Canopy (H) to the ceiling and secure in place by tightening the Canopy loop collar(I) into the Canopy Loop(F)
- Install the light bulbs and glass shade as per the fixture assembly sheet.

Fig. 1


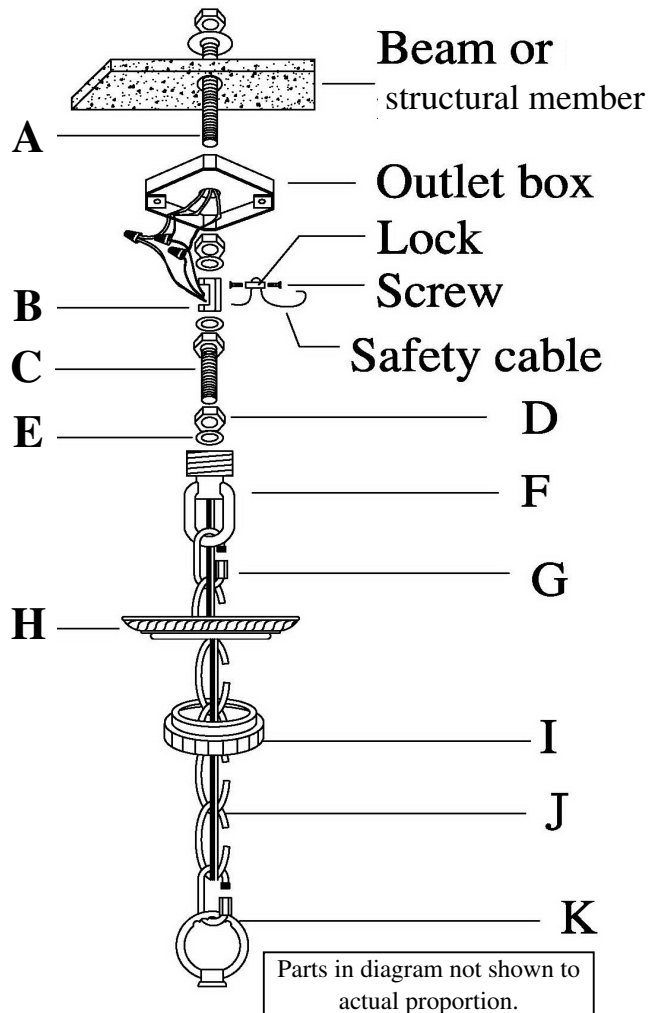


Fig. 2

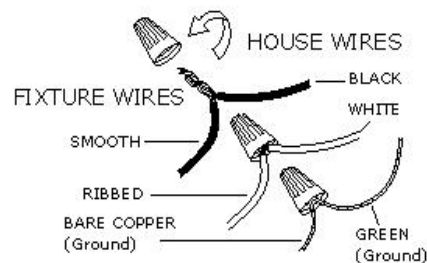

**YOUR INSTALLATION IS NOW COMPLETE. RETURN POWER TO THE JUNCTION BOX AND TEST THE FIXTURE.**