For Style 1144P5-1 Assembly Instruction Sheet 批S-1144P5-1


N P Cell

ole Required: Platinand surveidriver, Philips screedriver, plient, wire cultims, who addippers, electrical lape, autily glasses. It is devere: (1) LED Platment Buths E12 MAXAW (Blate Not Induded)
Installed Amenicky These: 16-50 minutes
specificated Amenicky These: 16-50 minutes
specificated individual parts before beginning invalidation. Check peologic content led and diagrams below to be sure of parts are
specificated individual report of parts before beginning invalidation. Check peologic content led and diagrams below to be sure of parts are
specificated from the property of the parts of the


Warnings and Cautions

um off electricity at circuit breaker or main fuee box before installation. Consult a licensed electricism if in doubt. e instructions are provided for your safety. It is very important you read them completely before installing the fixture.

Disconnect fixture from power source before replacing buibs. Make sure buibs are given sufficient time to cool before removel. We strongly recommend that a licensed, profi ional electrician perform the installation.

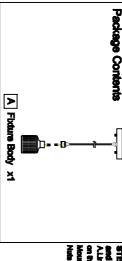

STEP 2 - Attach Mounting Serews, Lock Washers g Screws (DD) .Hand lighton until enug founting bracket(EE) and Hotes ng Screws (DD) into the indee on the

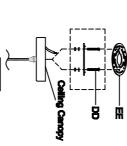

Hardware Contents

Figure 2

STEP 3 - Attach Mounting bracket to Outlet Box

from outlet box

White wire


A. Pase the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box rith the head of the Green Ground Screw facing you. cure it with Outlet Box

B. Screw Up the Metal Shade with the top Black Metal Loop.

(A) Picture Body

A.Connect the positive terminal to the positive terminal and the negative terminal to the negative terminal.

BTEP1 -Assemble the Metal Shade

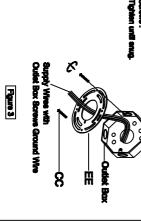


Bers, or Green from outlet box

Ground wire

from outlet box


(C) Matalions (D) Who Connects (2) Metal shed

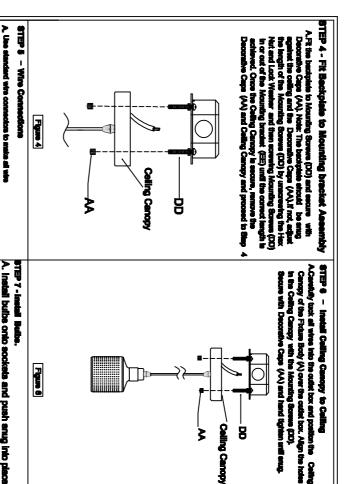

⋛

Celling Canopy

8

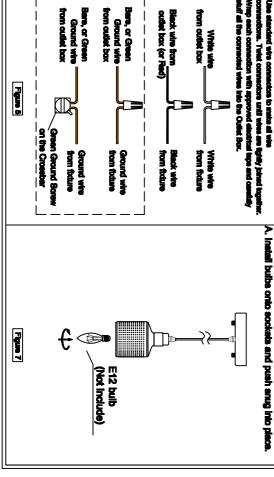

Bare, or Green

Ground wire

outlet box (or Red) Hack wire from

Figure 1